



Dimension L * W * H 300 * 85 * 41 (1U) mm 11.8 * 3.35 * 1.61 (1U) inch

Parallel R c Alus A E CBCE

■ Features

- Charger for lead-acid batteries (Gel, flooded and AGM) and Li-ion batteries (lithium iron and lithium manganese)
- Built-in default 3 stage charging curves and programmable curve
- Built-in I²C interface, PMBus protocol
- · Output voltage and current programmable
- Universal AC input / Full range (Withstand 300VAC surge input for 5 seconds)
- · Built-in active PFC function
- · Forced air cooling by built-in DC fan
- Built-in OR-ing FET, support hot swap (hot plug)
- · Active current sharing up to 8000W for one 19" rack shelf
- Protections: Battery under voltage / Battery no connection protection / Short circuit / Over temperature
- · Optional conformal coating
- 5 years warranty

Certificates

· Safety: UL/EN/IEC 60950-1

• EMC: EN 55022 / 55024

 
Applications

- Large scale DC UPS or emergency backup system
- · Marine battery charger module
- · Electric scooter or vehicle charger station
- · Wastewater treatment system
- · Electrolysis system

■ Description

RCB-1600 series is a single output 1600W AC/DC charger with 1U low profile (41mm). It is an intelligent charger with embedded charging curves which are programmable; users are also able to adjust the charging voltage and current via the built-in potentiometer, output programmable functions, or PMBus to charge different types of batteries, such as lead-acid batteries and li-ion batteries. Various protection mechanisms as well as the temperature compensation function are provided to assure the normal and safe operations. The rack-mountable attribute allows RCB-1600 to perfectly suit the charging, backup or constant current source applications exploiting the rack architecture or central management.

■ Model Encoding




X Note: 19" rack shelf, RHP-1U, available.

1600W Rack Mountable Front End Battery Charger

SPECIFICATION

MODEL		RCB-1600-12	RCB-1600-24	RCB-1600-48		
ОИТРИТ	BOOST CHARGE VOLTAGE(Vboost)(default)	14.4V	28.8V	57.6V		
	FLOAT CHARGE VOLTAGE(Vfloat)(default)	13.8V	27.6V	55.2V		
	CURRENT RANGE	0 ~ 100A	0 ~ 55A	0 ~ 27.5A		
	RATED POWER	1440W	1584W	1584W		
	VOLTAGE ADJ. RANGE	By built-in potentiometer, SVR				
		11.5 ~ 15V	23.5 ~ 30V	47.5 ~ 58.8V		
	RECOMMENDED BATTERY CAPACITY(AMP HOURS) Note.3	330 ~ 1000Ah	180 ~ 550Ah	90 ~ 270Ah		
	LEAKAGE CURRENT FROM BATTERY (Typ.)	<1mA				
	() ()	90 ~ 264VAC 127 ~ 370VDC				
	FREQUENCY RANGE	47 ~ 63Hz				
	POWER FACTOR (Typ.)	0.97/230VAC at full load				
INPUT	EFFICIENCY (Typ.)	90.5%	92%	93%		
01		14A/115VAC 8A/230VAC	15A/115VAC 8.5A/230VAC	1		
	INRUSH CURRENT (Typ.)	COLD START 35A/230VAC				
	LEAKAGE CURRENT	<1.5mA / 230VAC				
		15.75 ~ 18.75V	31.5 ~ 37.5V	63 ~ 75V		
PROTECTION	OVER VOLTAGE			00 100		
INDIEGION	OVER TEMPERATURE	Protection type: Shut down o/p voltage, re-power on to recover Shut down o/p voltage, recovers automatically after temperature goes down				
	OUTPUT VOLTAGE PROGRAMMABLE(PV)					
	. ,	Adjustment of output voltage is allowable to 75 ~ 125% of nonlinial output voltage. Please refer to the Function Manual. Adjustment of output voltage is allowable to 20 ~ 100% of rated current. Please refer to the Function Manual.				
	AUXILIARY POWER	5V @ 0.3A, 12V @ 0.8A				
FUNCTION	REMOTE ON-OFF CONTROL	By electrical signal or dry contact Power ON:short Power OFF:open. Please refer to the Function Manual				
1011011011		-3mV / °C / cell / (12V = 6 cells ; 24V = 12 cells ; 48V = 24 cells)				
	DC OK SIGNAL	The isolated TTL signal out. Please refer to the Installation Manual				
	AC OK SIGNAL	The isolated TTL signal out. Please refer to the Installation Manual				
	WORKING TEMP.	-30 ~ +70°C (Refer to "Derating Curve")				
	WORKING HUMIDITY	20 ~ 90% RH non-condensing				
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH				
LITTINONIENT	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)				
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes				
	SAFETY STANDARDS	UL60950-1, TUV EN60950-1 approved				
SAFETY &	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG	G:1.5KVAC (0.5KVAC for 12V)			
EMC	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500	, ,			
(Note 6)	EMC EMISSION		uction Class B, Radiation Class A; EN61000	1-3-2,-3		
•	EMC IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11, EN61000-6-2 (EN50082-2), light industry level, criteria A				
	MTBF	160.1K hrs min. Telcordia SR-332 (Bellcore); 38.9K hrs min. MIL-HDBK-217F (25°C)				
OTHERS	DIMENSION	300*85*41mm (L*W*H)				
	PACKING	1.87Kg; 6pcs/12.2Kg/1.16CUFT				
NOTE	1. Modification for charger specification may be required for different battery specification. Please contact battery vendor and MEAN WELL for details. 2. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. 3. This is MEAN WELL's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation. 4. Derating may be needed under low input voltages. Please check the derating curve for more details. 5. The charger is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 360mm*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com)					



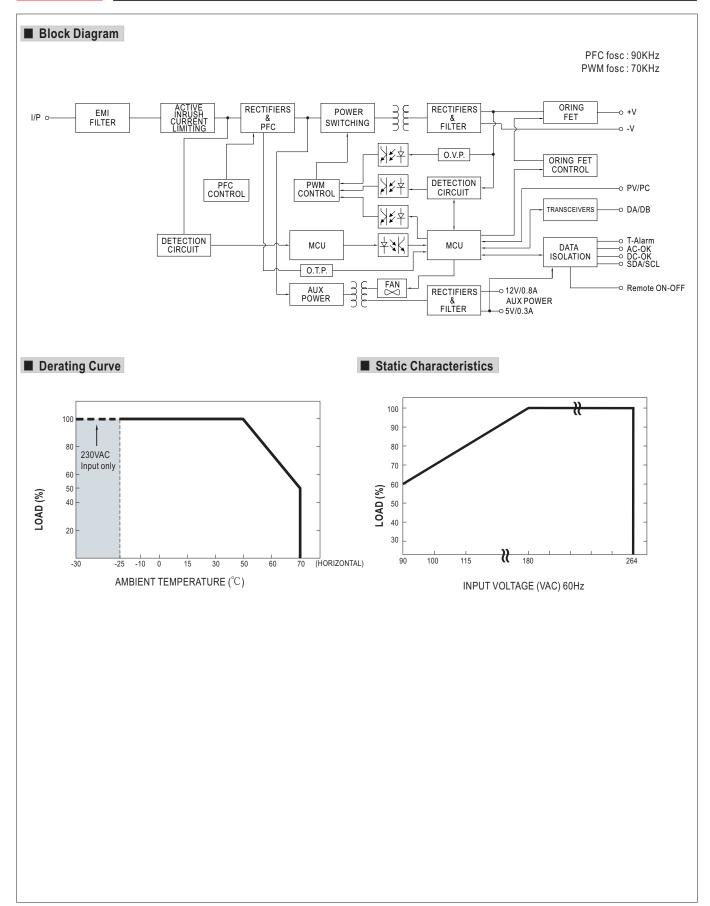




■ Function Manual


1.PMBus Communication Interface

* RCB-1600 supports PMBus Rev. 1.1 with maximum 100KHz bus speed, allowing information reading, status monitoring, output trimming, etc. For details, please refer to the Installation Manual.

2. Charging Curve

 - % By factory default, this charger performs the default curve which can be programmed via PMBus.
- ** To disable / enable the charging curve, change to a 2 stage curve, a different curve frequently used for certain types of batteries in the industry, and so on, please refer to the Installation Manual.



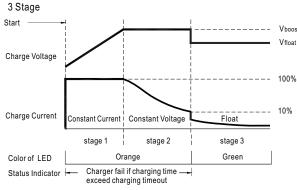


© Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

© Embedded 3 stage charging curve

MODEL	Description	Vboost	Vfloat
	Default, programmable	14.4	13.8
12V	Pre-defined, gel batter	14	13.6
120	Pre-defined, flooded battery	14.2	13.4
	Pre-defined, AGM battery	14.5	13.5
	Default, programmable	28.8	27.6
24V	Pre-defined, gel batter	28	27.2
24 V	Pre-defined, flooded battery	28.4	26.8
	Pre-defined, AGM battery	29	27
	Default, programmable	57.6	55.2
48V	Pre-defined, gel batter	56	54.4
400	Pre-defined, flooded battery	56.8	53.6
	Pre-defined, AGM battery	58	54

3. Remote ON-OFF Control

The charger can be turned ON/OFF individually or along with other units in parallel by using the "Remote ON-OFF" function.

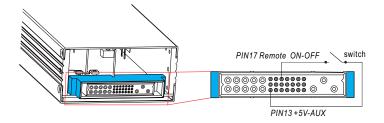



Between Remote ON-OFF and +5V-AUX	Charger Status
Switch Short	ON
Switch Open	OFF



5. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)


In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed to 75~125% of the nominal voltage by applying EXTERNAL VOLTAGE.

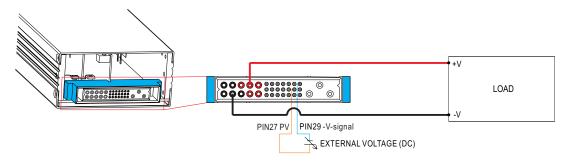


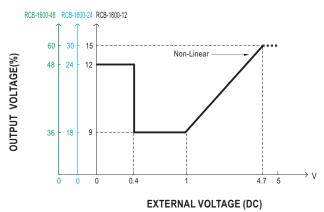


6. Output Current Programming (or, PC / remote current programming / dynamic current trim)

% The output current can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

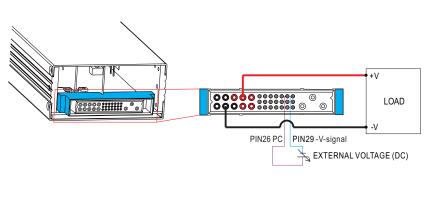

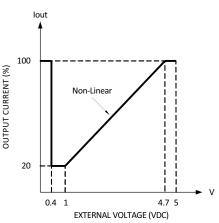


 7. Temperature Compensation




- To exploit the temperature compensation function, please attach the temperature sensor, NTC, to the battery or the battery's vicinity.
- The charger is able to work normally without the NTC.



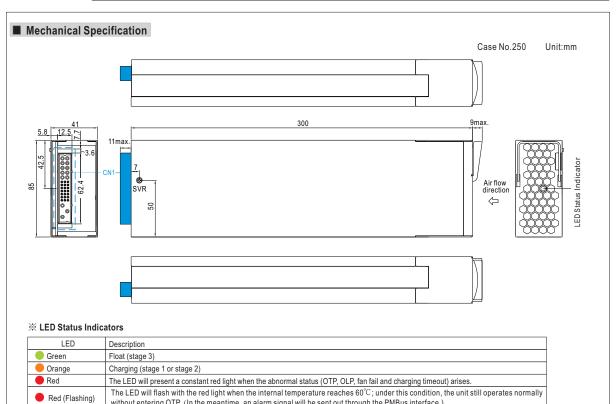

 ※ Input / Output Connector Pin No. Assignment(CN1): Postronic PCIM34W13M400A1



Mating Housing Postronic PCIM34W13F400A1

without entering OTP. (In the meantime, an alarm signal will be sent out through the PMBus interface.)

Pin No.	Function	Description	
1,2,3,4,6	-V	Negative output terminal.	
5,7,8,9,10	+V	Positive output terminal.	
11	+12V-AUX	Auxiliary voltage output, 10.8~13.2V, referenced to GND-AUX (pin 12). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by the Remote ON/OFF control	
12	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).	
13	+5V-AUX	Auxiliary voltage output, 4.5~5.5V, referenced to GND-AUX (pin 12). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by the Remote ON/OFF control	
14	SCL	Serial Clock used in the PMBus interface. (Note.2)	
15	SDA	Serial Data used in the PMBus interface. (Note.2)	
16	T-ALARM	High $(4.5 \sim 5.5 \text{V})$: When the internal temperature exceeds the limit of temperature alarm, or when fan fails. Low $(0 \sim 0.5 \text{V})$: When the internal temperature is normal, and when fan normally works. The maximum sourcing current is 10mA and only for output(Note.2)	
17	Remote ON-OFF	The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote \ ON/OFF \ $ and $+5V-AUX$. (Note.2) Short (4.5 ~ 5.5V): Power ON; Open (0 ~ 0.5V): Power OFF; The maximum input voltage is 5.5V.	
18	DC-OK	High $(4.5 \sim 5.5 \text{V})$: When the Vout $\leq 8 \text{V}/16 \text{V}/32 \text{V} \pm 1 \text{V}$. Low $(0 \sim 0.5 \text{V})$: When Vout $\leq 8 \text{V}/16 \text{V}/32 \text{V} \pm 1 \text{V}$. The maximum sourcing current is 10mA and only for output. (Note.2) DC OK is associated with battery low protection.	
19	AC-OK	High (4.5 ~ 5.5V): When the input voltage is ≧87Vrms. Low (0 ~ 0.5V): When the input voltage is ≦75Vrms. The maximum sourcing current is 10mA and only for output. (Note.2)	
20	D0	Interface lines for charging curve selection. (Note.1)	
21,22,23	A2,A1,A0	PMBus interface address lines. (Note.1)	
24,25	DB,DA	Differential digital signal for parallel control. (Note.1)	
26	PC	Connection for output current programming. (Note.1)	
27	PV	Connection for output voltage programming. (Note.1)	
28	+V(signal)	Positive output voltage signal. It cannot be connected directly to the load.	
29	-V(signal)	Negative output voltage signal. It is for certain function reference; it cannot be connected directly to the load.	
30	RTH+		
31	RTH-	Temperature sense associated with the temperature compensation funcion.	
32	FG	AC Ground connection.	
33	AC/L	AC Line connection.	
34	AC/N	AC Neutral connection.	

Note1: Non-isolated signal, referenced to [-V(signal)]. Note2: Isolated signal, referenced to GND-AUX.

■ Installation Manual

Please refer to: http://www.meanwell.com/webnet/search/InstallationSearch.html